

# Manfrotto Fitting Chart - Video Camera Bags & Rain Covers

• Use only with viewfinder

BRAND	CAMCORDER	CAMCORDER CASE										BACKPACK			RAIN COVER								
		MB PL-CC-191N	MB PL-CC-192N	MB PL-CC-193N	MB PL-CC-195N	MB PL-CC-191	MB PL-CC-193	MB PL-CC-195	MB PL-CC-197	MB MP-SB-50BB	MB MA-SB-A7	MB PL-B-220	MB PL-PV-410	MB PL-PV-610	MB PL-E-702	MB PL-CRC-12	MB PL-CRC-13	MB PL-CRC-14	MB PL-CRC-15	MB PL-CRC-17	MB PL-RC-1	MB PL-RC-10	
Canon	EOS 1D C	•				•				•	•	•			•								
Canon	EOS C100/C100 Mark II		•						•									•					
Canon	EOS C100/C100 Mark II Disassembled	•					•			•		•						•					
Canon	EOS C100/C100 Mark II microphone detached		•						•	•								•					
Canon	EOS C300		•						•	•								•					
Canon	EOS C300 Mark II				•				•									•					
Canon	EOS C300 Mark II microphone detached		•						•									•					
Canon	EOS C300/C300 Mark II Disassembled	•					•			•		•						•					
Canon	EOS C500		•							•								•					
Canon	EOS C500 Disassembled	•					•					•						•					
Canon	ME20F-SH								•												•		
Canon	XA10	•				•												•					
Canon	XA20	•				•												•					
Canon	XA25	•				•												•					
Canon	XA30	•				•												•					
Canon	XA35	•				•												•					
Canon	XC10	•				•														•			
Canon	XF100	•				•						•						•					
Canon	XF105	•				•						•						•					
Canon	XF200	•				•						•						•	•				
Canon	XF200 microphone detached	•				•						•						•	•				
Canon	XF205	•				•						•						•	•				
Canon	XF205 microphone detached	•				•	•					•						•	•				
Canon	XF300			•			•											•	•				
Canon	XF305			•			•											•	•				
Canon	XHA1	•				•						•						•	•				
Canon	XHA1s	•				•						•						•	•				
Panasonic	AG-AC130			•			•					•							•				
Panasonic	AG-AC160			•			•					•							•				

# Manfrotto Fitting Chart - Video Camera Bags & Rain Covers

• Use only with viewfinder

BRAND	CAMCORDER	CAMCORDER CASE										BACKPACK			RAIN COVER								
		MB PL-CC-191N	MB PL-CC-192N	MB PL-CC-193N	MB PL-CC-195N	MB PL-CC-191	MB PL-CC-193	MB PL-CC-195	MB PL-CC-197	MB MP-SB-50BB	MB MA-SB-A7	MB PL-B-220	MB PL-PV-410	MB PL-PV-610	MB PL-E-702	MB PL-CRC-12	MB PL-CRC-13	MB PL-CRC-14	MB PL-CRC-15	MB PL-CRC-17	MB PL-RC-1	MB PL-RC-10	
Panasonic	AG-AC8P							•															
Panasonic	AG-AC90							•															
Panasonic	AG-AF100							•															
Panasonic	AG-DVX100B	•						•				•						•	•				
Panasonic	AG-DVX200		•					•				•								•			
Panasonic	AG-HMC155			•				•				•								•			
Panasonic	AG-HPX170			•				•				•								•			
Panasonic	AG-HVX200			•				•				•								•			
Panasonic	AJ-PX270			•				•				•				•							
Panasonic	AJ-PX5000G + Fujinon 12x										•											•	
Panasonic	AJ-PX800G + Fujinon 16x										•											•	
Panasonic	Lumix GH4	•					•				•	•									•		
Sony	FDR-AX1			•				•				•								•			
Sony	HDR-FX7			•				•				•											
Sony	HVR-Z5			•				•				•									•		
Sony	HXR-NX100			•				•				•							•	•			
Sony	HXR-NX100 microphone detached	•						•				•							•	•			
Sony	HXR-NX3/1			•				•				•								•	•		
Sony	NEX-EA50M + 18-200				•			•													•		
Sony	NEX-EA50M + 18-200 viewfinder detached			•				•													•		
Sony	NEX-FS100R + 18-200			•				•													•		
Sony	NEX-FS100R + 18-200 Disassembled			•				•				•									•		
Sony	NEX-FS100R + 18-200 microphone detached			•				•					•								•		
Sony	NEX-FS700R + 18-200				•			•													•		
Sony	NEX-FS700R + 18-200 Disassembled			•				•				•									•		
Sony	NEX-FS700R + 18-200 microphone detached				•			•					•								•		
Sony	PDW-680 + Fujinon lens										•											•	
Sony	PDW-700 + Fujinon 18x										•											•	
Sony	PDW-750 + Fujinon 18x										•											•	

# Manfrotto Fitting Chart - Video Camera Bags & Rain Covers

• Use only with viewfinder

BRAND	CAMCORDER	CAMCORDER CASE										BACKPACK			RAIN COVER								
		MB PL-CC-191N	MB PL-CC-192N	MB PL-CC-193N	MB PL-CC-195N	MB PL-CC-191	MB PL-CC-193	MB PL-CC-195	MB PL-CC-197	MB MP-SB-50BB	MB MA-SB-A7	MB PL-B-220	MB PL-PV-410	MB PL-PV-610	MB PL-E-702	MB PL-CRC-12	MB PL-CRC-13	MB PL-CRC-14	MB PL-CRC-15	MB PL-CRC-17	MB PL-RC-1	MB PL-RC-10	
Sony	PDW-850 + Fujinon 18x								•													•	
Sony	PMW-300K2				•			•						•					•				
Sony	PMW-300K2 viewfinder detached			•			•							•					•				
Sony	PMW-350K				•				•														
Sony	PMW-EX1R			•			•						•							•			
Sony	PMW-F5		•																	•			
Sony	PMW-F5 viewfinder detached	•					•													•			
Sony	PMW-X200			•			•						•					•	•				
Sony	PXW-FS5+18-105	•					•				•	•						•	•				
Sony	PXW-FS7+28-135				•			•						•						•			
Sony	PXW-FS7+28-135 viewfinder detached			•				•						•						•			
Sony	PXW-X180		•					•					•							•			
Sony	PXW-X200		•					•					•							•			
Sony	PXW-X320 + Fujinon 16x								•													•	
Sony	PXW-X400 + Fujinon 10x								•													•	
Sony	PXW-X500 + Fujinon 10x								•													•	
Sony	PXW-X70	•					•					•	•					•					
Sony	PXW-Z100		•					•					•					•	•				
Blackmagic	Micro Studio camera 4k	•					•			•	•	•		•									
Blackmagic	Production camera 4k	•					•			•	•	•		•									
Blackmagic	Studio camera	•					•			•	•	•		•									
Blackmagic	URSA Mini				•				•											•			
Blackmagic	URSA Mini handle detached		•						•				•							•			
JVC	GY-HM200	•					•											•	•				
JVC	GY-HM600			•				•					•					•	•				
JVC	GY-HM850 + Fujinon 20x				•			•					•										•
JVC	GY-LS300CH			•				•										•	•				

Last update: 2016-04-04

\* The information contained in this fitting chart is for general information purposes only. The information is provided by Manfrotto and while we endeavor to keep the information up to date and correct, we make no representations or warranties of any kind, express or implied, about the completeness, accuracy, reliability, suitability or availability with respect to the website or the information, products, dimensions. Any reliance you place on such information is therefore strictly at your own risk. We suggest you to visit our dealers and check dimensions with your gears to make sure it fits your need.